

# ICON SERIES ICON HD

## RECOMMENDED APPLICATIONS



CASINOS



HIGH ROLLING LOADS

## SYSTEM NAME

Icon HD Super Heavy Industrial Grade 13.0kN

## DESCRIPTION


Icon HD offers an upgrade on Icon X, Icon Data and Icon Air for industrial level panel loads. The upgrade incorporates heavy duty understructure and thicker steel than the standard systems. This provides a longer lifespan with an extended product warranty.

Icon HD is suitable for environments subject to heavy rolling loads such as Casino's and Showrooms.

## COMPLIANT STANDARDS

Australian Standard AS4154/AS4155  
Australian Standard AS1170  
NATA Testing Certification  
ISO9239-1-2003  
EN12825-2001  
DIN4102-1-1998

**SIZE** 600mm x 600mm

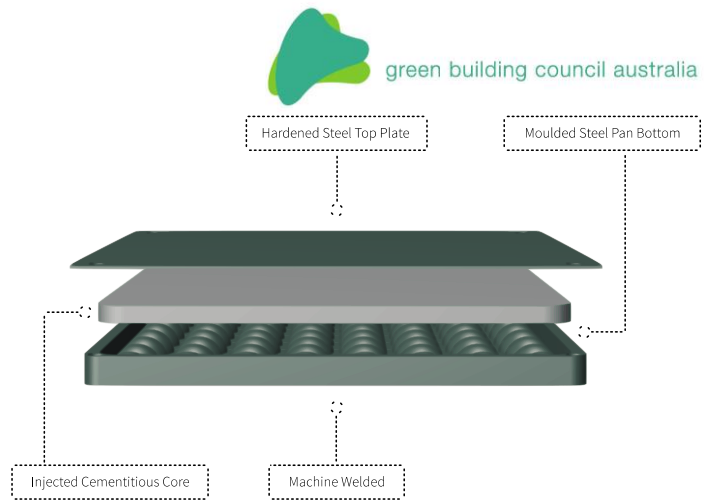

**CORE** Cementitious Compound

## FINISH

ASP's standard powder coated finish.

## CONSTRUCTION

The panels consist of a hardened steel top and bottom sheet plate with corrosion resistant protection, inside and out, encapsulating a structural cementitious core.

## TOLERANCE

±0.25mm and a flatness tolerance of ±0.5mm measured on a diagonal across the top of the panel

## CONNECTION

The panel is screw fixed on top of the stringer assembly to the pedestal head at all four corners

**DEPTH** 33mm

## PERFORMANCE TO STANDARDS GUIDE PER AS4154 – 1993 AUSTRALIAN STANDARD – GENERAL ACCESS FLOORS

Load Level	Panel (kg)	System (kg/m <sup>2</sup> at 150mm FFH)
13.0kN Super Heavy Industrial Grade	21.23	70.44
<b>STATIC PERFORMANCE (kN)</b>		
<b>Concentrated</b>	<b>Impact</b>	<b>Ultimate</b>
13.0	0.4	49.6
<b>DYNAMIC PERFORMANCE (kN) - Passes</b>		
<b>10 passes (wheel size 75x25mm)</b>	<b>10,000 passes (wheel size 150x50mm)</b>	<b>40,000 passes (wheel size 200x75mm)</b>
11.0	8.9	2.25
<b>Uniform (kPa/m<sup>2</sup>)</b>	23.94 (500psf)	
<b>Safety Factor:</b> Panels must provide a minimum safety factor of three (3) times the concentrated load specified above in accordance with Australian Standards AS4154-1993		



## PEDESTAL SIZE

128mm x 128mm base plate

## PEDESTAL CONSTRUCTION

Hot dipped galvanised steel pedestal base, head and rod. Finished with an ABS locating gasket.

## PEDESTAL LOCKING

The pedestals will be provided with an adjusting and locking nut to maintain the assembly at a selected height, which requires a deliberate action to change the height setting, and which prevents vibration displacement.

## PEDESTAL FINISH

Hot dipped galvanized finish.

## PEDESTAL CONNECTION

The panel is screw fixed to the pedestal head at all four corners.

## PEDESTAL FINISHED FLOOR HEIGHT (FFH)

The finished floor height of the access floor is measured from the sub floor to the top surface of the installed access floor.

## STRINGER SIZE

35mm x 22mm x 1.8mm x 600mm

## STRINGER CONSTRUCTION

Rectangular steel welded tube with 1.6mm sponge rubber foam.

## STRINGER FINISH

Hot dipped galvanized finish.

## STRINGER CONNECTION

The stringer is screw fixed to the pedestal head.

## MAINTENANCE GUIDE

### CLEANING OF PANEL SURFACE COVERING


Any dust or building debris falling on top of the panels should not be swept across the top of the floor; instead, it should be vacuumed away. Sweeping access floors can force dust between panel edges or onto pedestal heads and stringers which can cause noise issues.

### APPLICATION TO FINISHES

Prior to applying any finishes on the raised access floor system, the entire surface must be thoroughly cleaned and vacuumed. This process is essential to prevent dust and debris becoming trapped between panels and in the adhesive layer of subsequent finishes which can lead to potential noise issues.

### SITE CONDITIONS

Activities that generate significant dust onsite, during or after the access floor installation process, should be effectively managed by the head contractor to avoid a build-up on pedestal heads or stringers that can cause potential, unwanted noise issues. Vacuuming of fine dust accumulated on the access floor panels is recommended over sweeping.

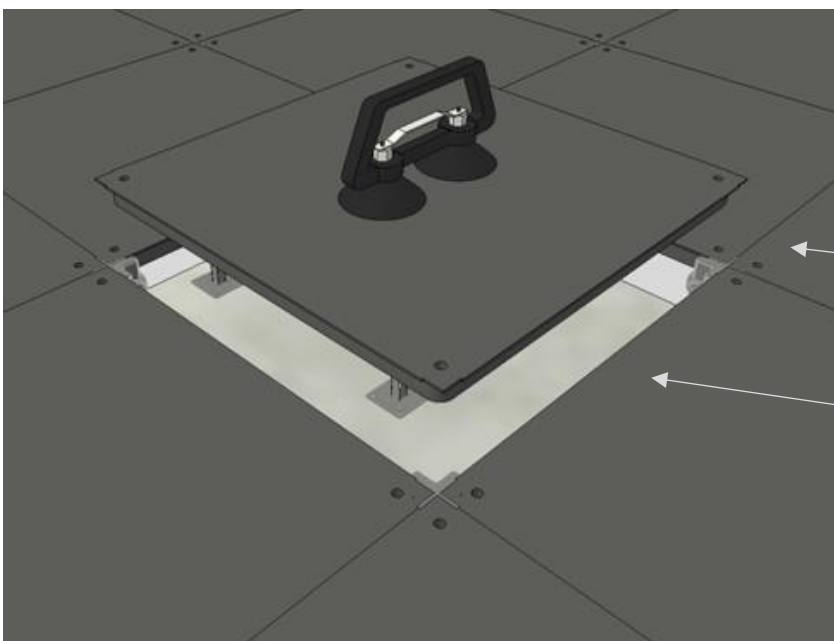

Vacuum to ensure the surface is free from debris, clearing all dust prior to the application of finishes.

Avoid sweeping across the top of the floor to prevent dust being forced between panels.

## MAINTENANCE CONTACT DETAILS

If you require further assistance regarding maintenance instructions of an ASP Access Flooring system, please contact:

**CONTACT:** ASP Sales

**PHONE:** 02 9620 9915

**EMAIL:** [sales@aspfloors.com.au](mailto:sales@aspfloors.com.au)

**WEBSITE:** [www.aspfloors.com](http://www.aspfloors.com)